



425 Hanley Industrial Court, St. Louis, MO 63144
 Phone: (314) 644-4300, Fax: (314) 644-5332
 www.indeeco.com

INSTALLATION INSTRUCTIONS

**For INDEECO of the commercial baseboard heater
 «BCI/BCSI/BII/BISI Series»**

THE INSTALLATION MUST BE EXECUTED
 BY A QUALIFIED TECHNICIAN



INSTALLATION

- 1- Remove baseboard front panel by removing screws at bottom and remove the appropriate junction box cover.
- 2- Remove required knockouts.
- 3- Install the relay or thermostat if supplied as a kit. See Options section for details.
- 4- Make electrical connection according to the wiring diagram in accordance with local and national codes.
- 5- Secure heater to the wall and loose screws by 1/2 turn for metal thermal expansion. **Attention:** Install bottom of heater not less than 50 mm (2 in.) above the finished floor for bottom air inlet option A.
- 6- Replace junction box cover and baseboard front panel before energizing.

OPTIONS

All heating equipment and options must be installed in accordance with local and national codes.

Thermostat

T1, T2, T5, T6

Refer to the upper section of the wiring diagram for connections.

Refer to instructions supplied with this option for mounting.

Relays

R1, R2, R6, R7

Refer to the diagram included with the relay option for connections.

Refer to instructions supplied with this option for mounting.

CORNERS AND BLANK SECTIONS

Install blank sections and corners in the same fashion as the heaters. Install corners using the mounting holes.

Use «EMT» tubing or «BX» cable to run wiring into these options.

INTERCONNECTION

The connection boxes and the wiring channel are approved for interconnection of baseboard heaters and components which are on the same heating branch circuit. For all other options in this series, use «EMT» tubing or «BX» cable to run wiring.

(Ex: Corner box, empty cabinets, etc.)

The heater junction box volume without options is 790 cm³ (48.2 in.³).

ATTENTION

Basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 in. (75 mm) from the front of the heater.
- Do not use outdoors.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- Do not block air intakes or exhaust in any manner.
- Heater contains arcing and sparking parts. Do not use in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

MAINTENANCE

Once a year, remove the front panel and use a vacuum cleaner to remove the dust accumulation inside the heater.

Cleaning should be done while the heater is disconnected from the supply circuit.

Any other servicing should be performed by a qualified technician.

KEEP THIS INSTRUCTION PAMPHLET
 FOR THE USER INS171-200310-02

WIRING DIAGRAM

