



INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS FOR INDEECO ARCHITECTURAL SLOPED TOP BASEBOARD HEATER "BASI SERIES"

1. Remove front cover to give access to mounting holes and junction box cover (both ends).
2. Remove junction box cover. Make connections according to local and national codes.
3. Attach heater to the wall using 0.25 inch (6mm) knock-outs located on the back of the heater.
4. Place all covers back on heater before testing.

INTERCONNECTION


The connection boxes and the wiring channel are approved for interconnection of baseboard heaters and components which are on the same heating branch circuit. A grounding wire must join all heaters to keep ground continuity.

BUILT-IN THERMOSTAT SETTING


(optional)

The built-in thermostat can be set with a small flat screwdriver through the upper grille. To set the thermostat at the desired temperature:

- Set thermostat at maximum temperature (turn clockwise).
- When the desired temperature is reached, turn the thermostat counter-clockwise slowly until you hear a "click".
- The thermostat will keep the room at this temperature.

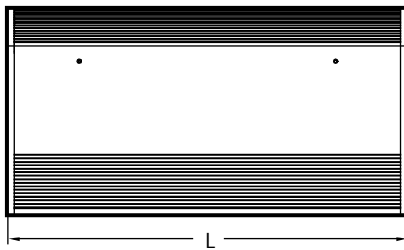

Front View

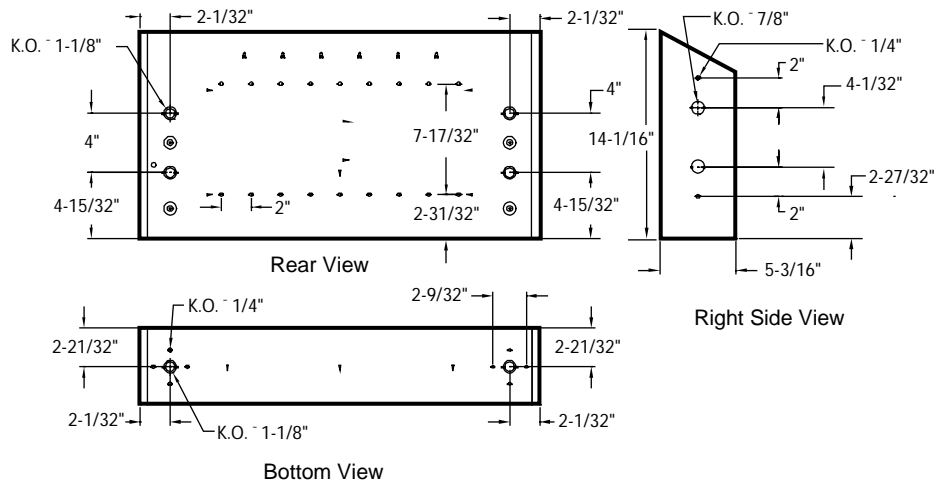

| Watts | LENGTH |
|-------|--------|
| 1000 | 27" |
| 1500 | 37" |
| 2000 | 47" |
| 2500 | 57" |
| 3000 | 65" |
| 3500 | 75" |
| 4000 | 83" |