



425 Hanley Industrial Court, St. Louis, MO 63144
Phone: (314) 644-4300, Fax: (314) 644-5332
www.indeeco.com

INSTALLATION INSTRUCTIONS For INDEECO of the Thermostat Kit «UCI Series»

THE INSTALLATION MUST BE EXECUTED BY A QUALIFIED TECHNICIAN




CAUTION
DISCONNECT ALL POWER SUPPLIES
BEFORE WORKING ON ANY CIRCUIT.

INSTALLATION :

- 1) Remove access cover of the unit controls and the screen on the fan side.
- 2) Put the thermostat in the control box and pass the capillary tube through the hole.
- 3) Install the thermostat with the existing holes at the back of the unit with the provided screws. Put the knob on the shaft.
- 4) Fix the bulb on the back side of the control box using the two nylon straps and two screws.
- 5) Connect the two provided wires from the thermostat to the control terminal blocks T1 and T2.
- 6) Replace screen and access cover and reconnect power supply.
- 7) Check the good functioning of the thermostat by temporarily setting it at its maximum temperature then its minimum.

INS165-200705-00

DRAWING : UCI 2kW to 30kW

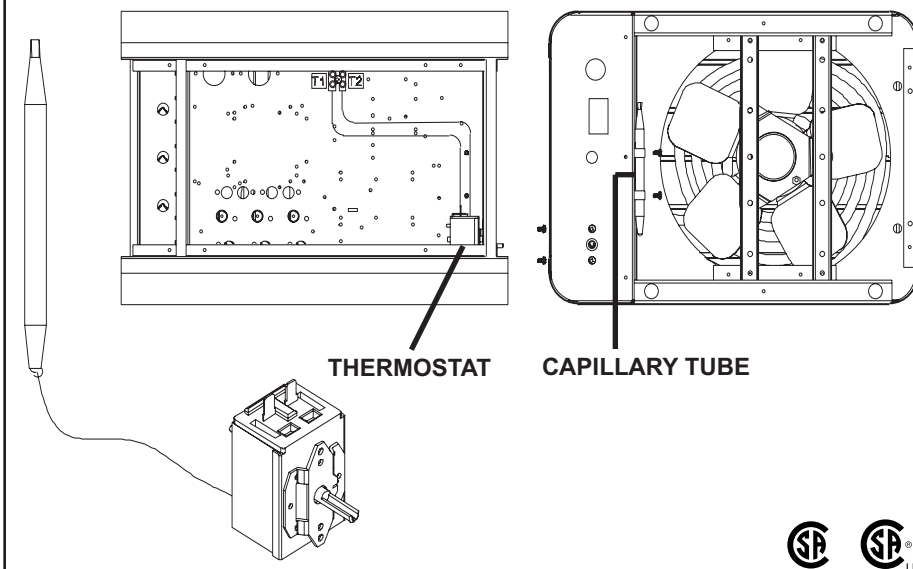

DRAWING : UCI 40kW to 60kW

