


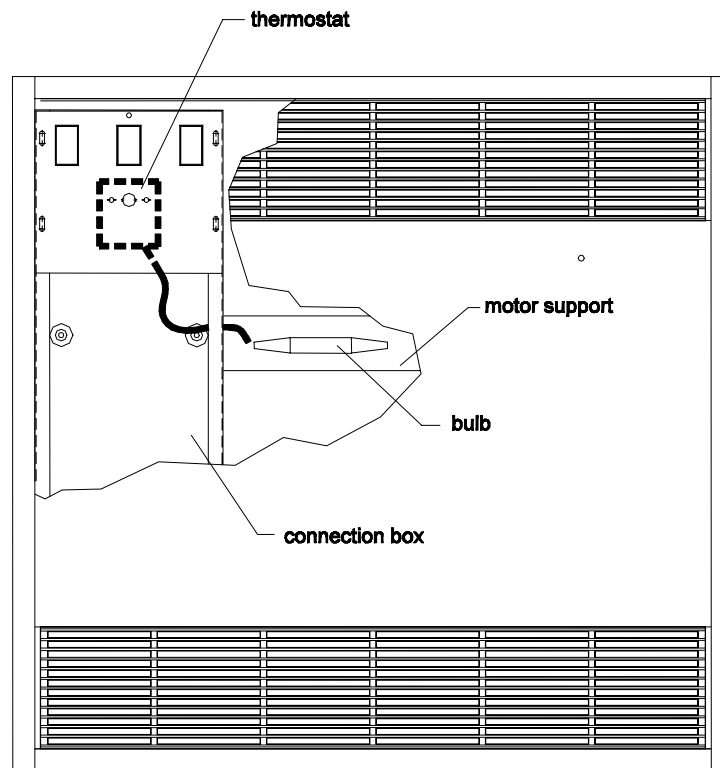

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS FOR INDEECO THERMOSTAT FOR THE CABINET UNIT HEATER "CUI SERIES"

1. Secure the thermostat on the cover of the junction box using the screws provided.
2. Connect the thermostat to the control terminal block T1 T2 (see the wiring diagram inside the connection box door).
3. Pass the thermostat bulb through the appropriate punched hole in the right hand side of the connection box.
4. Secure the thermostat bulb below the fan bracket using the two cable clamps and screws that are provided.



INDEECO
425 Hanley Industrial Court
St. Louis, MO 63144
Phone: (314) 644-4300 Fax: (314) 644-5332
www.indeeco.com